 


OWL AND BABY

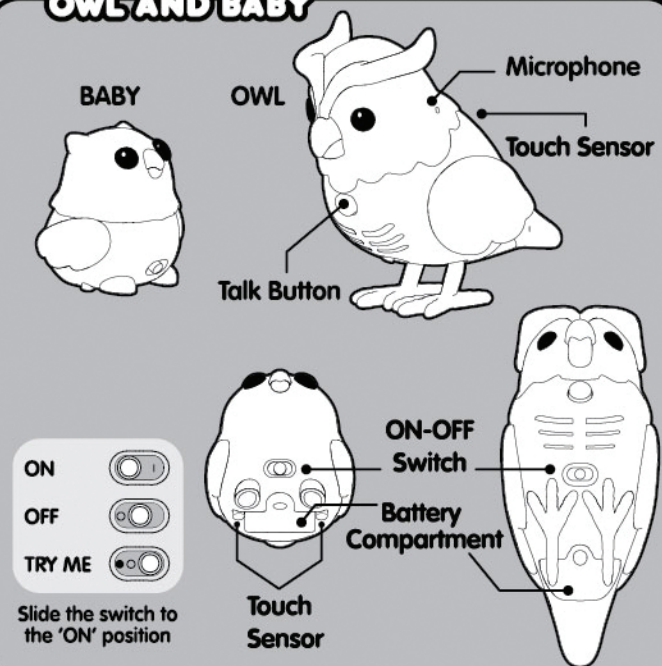


BATTERIES

Owl: x2 TEMPORARY BATTERIES INCLUDED FOR TRY-ME FEATURE.
Requires 2 x AAA/LR03 Batteries.
Alkaline batteries recommended.
Baby: x3 TEMPORARY BATTERIES INCLUDED FOR TRY-ME FEATURE.
Requires 3 x Button-Cell AG13/LR44 batteries.

- Use new batteries to obtain best performance.
- Batteries should be replaced by an adult.
- Do not use rechargeable batteries.
- Do not dispose of batteries in fire.
- Discard button-cell batteries carefully.
- Non-rechargeable batteries are not to be recharged.
- Exhausted batteries are to be removed from product.
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- The supply terminals are not to be short-circuited.
- Batteries are to be removed from the product when not in use.
- Do not allow children to play with button-cell batteries and keep button-cell batteries out of your child's reach.
- Never put button-cell batteries in your mouth for any reason as they are easily swallowed accidentally.
- If a button-cell battery is ingested, immediately seek medical attention.

IMPORTANT NOTE ON BATTERY REPLACEMENT

If Owl or Baby's movement, sounds, or sensors do not function properly DO NOT RETURN TO THE STORE. Replace with fresh batteries as shown.

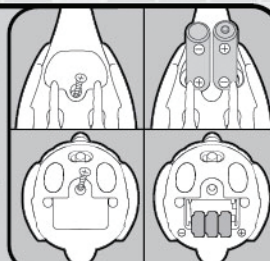


Phillips/cross head screwdriver (not included) needed to replace batteries.
REPLACEMENT BATTERIES NOT INCLUDED

FEEDING

Your Baby loves being fed.

- Place Owl and Baby on a flat surface facing each other, and tilt the Owl's body down so their beaks align.
- Watch as your Baby eats joyfully. To feed it more, allow the Owl to stand upright then tilt it's body down again.
- Eventually your Baby will become full, and both will celebrate by hooting happy songs to each other!

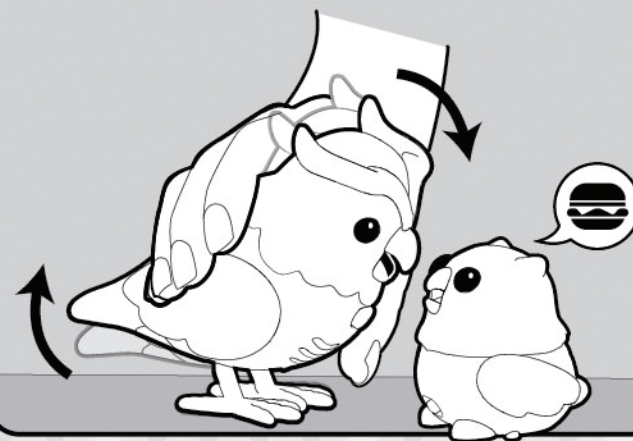

TALKBACK

Your Owl loves repeating what you say.

Recording

- Press and hold the button on your Owl's chest.
- Then say your message (up to 10 seconds).
- Your Owl will immediately repeat your message back to you!

Playback

- To hear your Owl repeat your last recorded message, press the button on its chest quickly.




PETTING AND NURTURING

Your Owl enjoys being pet.

- Gently stroke your Owl's back and it will hoot for you.
- Continue petting and your Owl will get happier and hoot for longer, and eventually sing a tune!

Your Baby loves being nurtured.

- Place the Baby in the palm of your hand and it will hoot.
- Continue to nurture it lovingly and it will hoot for longer!

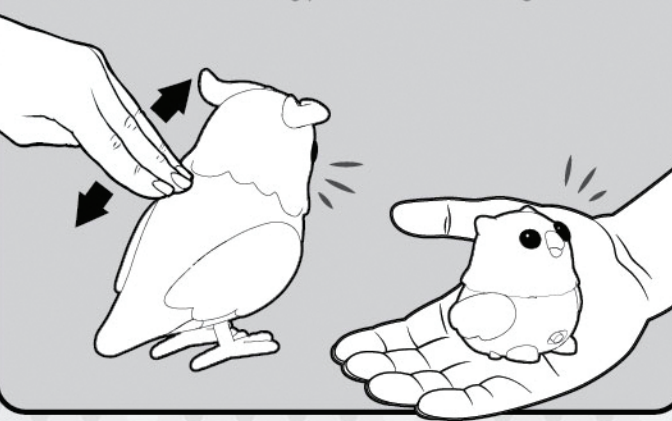

SLEEPING

Owl and Baby love your attention.

- When you leave either of them alone they will occasionally hoot and cry-out to get your attention.
- If you're lucky, the Owl and Baby will call for each other.

Listen out for this calling sound from either. When you hear it, quickly re-unite them and you'll be rewarded with a special happy hoot!

- Your Owl and Baby will fall asleep after half an hour, but you can wake each of them up at any time by pressing the button on your Owl's chest and nurturing the Baby in your hands. Then you can start playing all over again!



TROUBLESHOOTING

Owl or Baby function does not match instructions

- Always ensure switch is in 'ON' or 'OFF' position, not 'TRY ME'.

I want to delete a recorded message from Owl

- To erase a previously recorded message, press and hold the button on the Owl's chest to record a new one.

Owl does not chirp when I pet its back.

- Ensure the switch is not in 'TRY ME' position.
- Make sure you're stroking the area directly beneath the back of the Owl's head.
- Ensure you're not accidentally holding down the button on the Owl's chest.

Owl does not repeat my entire message.

- When 'ON' the Owl will record up to 10 seconds of sound.
- Ensure there are no significant pauses in what you say. Your Owl will think this is the end of your message and begin playback.
- Try to speak closer to the microphone when recording.
- Make sure you are in a quiet area with no loud background noise and you are holding your Owl close to your mouth.



TROUBLESHOOTING

Baby does not hoot when I nurture it.

- Ensure the switch is not in 'TRY ME' position.
- Ensure both contacts under the Baby are touching your palm. It may help to press it into your hand slightly.

Baby does not Feed when I tilt down the Owl.

- Make sure the beaks are close enough, they should almost be touching.

Owl and Baby do not sing after Feeding.

- This will only happen if you Feed 3 times in a row without a large delay in-between.
- If either Owl or Baby sing only one time, you're in 'TRY ME' mode. Please move switch to 'ON' position.

Baby gets stuck on loop and continues to make noises, even when separated from Owl.

- Move switch to 'OFF' position and replace with fresh batteries.

Owl and Baby do not make the special happy hoot when I re-unite them.

- There is only one particular call from Owl and Baby that will result in this happy sound. Try to work out which one it is!

CLEANING

After repeated play, your Owl and Baby may develop some dirt/marks on their soft surface.

Cleaning Options:

- Suede/fabric brush - gently comb affected area.
- Low-adhesive removable tape - repeatedly apply then remove from the affected area.
- Damp Cloth - Dampen a clean white cloth with a mixture of lukewarm water and mild detergent/shampoo.

IMPORTANT: Ensure cloth is only damp and there's no residual water. Gently dab the affected areas to clean the surface. Avoid scrubbing, as this could remove the flocking.

WARNING:

LITTLE LIVE PETS™ OWL AND BABY CONTAINS ELECTRONICS: IMMERSING IN, OR PLACING UNDER RUNNING WATER/LIQUIDS MAY DAMAGE OR DESTROY PRODUCT.

WWW.LITTLELIVEPETS.COM

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help.

WARNING! Not suitable for children under 36 months. Choking hazard. In case of unforeseen use, in particular of small parts, giving rise to harm.



WARNING:
CHOKING HAZARD - Small parts.
Not for children under 3 years.

N14642
Moose Enterprise Pty Ltd
092 667 055
94 092 667 055

INCLUDES:
1 Owl
1 Baby
1 Instruction booklet



©2013 Moose.
MADE IN CHINA

